

Installing your Pivot Door System



Thank you for purchasing the Pivot door system. Please follow these instructions carefully. Proper installation and maintenance will bring you years of trouble-free use.

Frame installation

- 1 Ensure the frame is fixed plumb, straight and level. Ensure the sill is properly packed. Frames without transoms will have a pivot cap fitted to the top of the frame head. It is important that sufficient clearance is allowed between the frame trimmer/lintel and the top of the pivot cap.

Door installation



- 2 Ensure the top of the pivot is retracted fully into the frame head by turning the slotted screw head anti-clockwise.
- 3 Hold the door 90 degrees from the frame. Insert the bottom of the door strap (rebated into the bottom of the door) onto the sill pivot, ensuring the door locates fully onto the flange of the pivot.
- 4 Align the top pivot pin on the frame with the pivot on the top of the door. Screw the top pivot in the frame head clockwise until the screw will no longer turn.

To remove door

Hold the door 90 degrees from the frame. Turn the slotted screw in the frame head top pivot until it is totally retracted. Tilt the door sideways away from the frame stile closest to the pivot. Lift the door off the sill pivot.

Horizontal adjustment

Pivot the door away from the frame stile. Insert a flat blade screw driver into the hole in the edge of the door. Turn the screw clockwise to increase the margin on the pivot side or anti-clockwise to decrease. Please note: No adjustment is possible to the sill pivot.

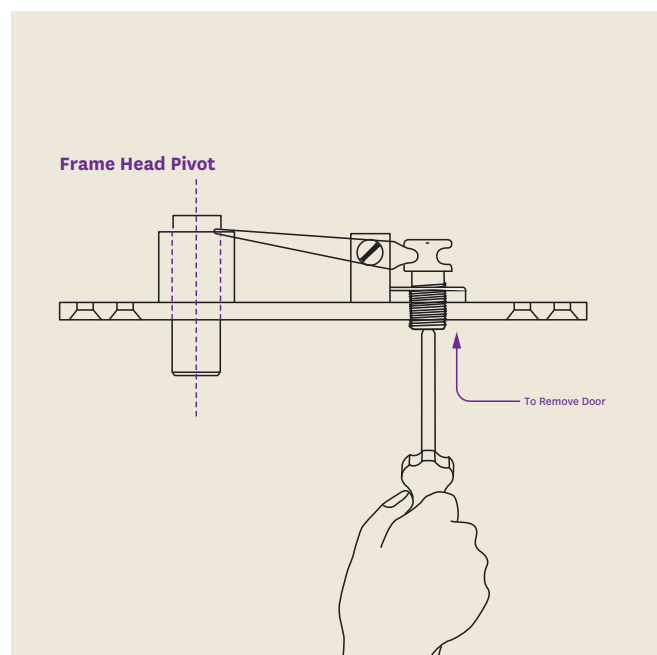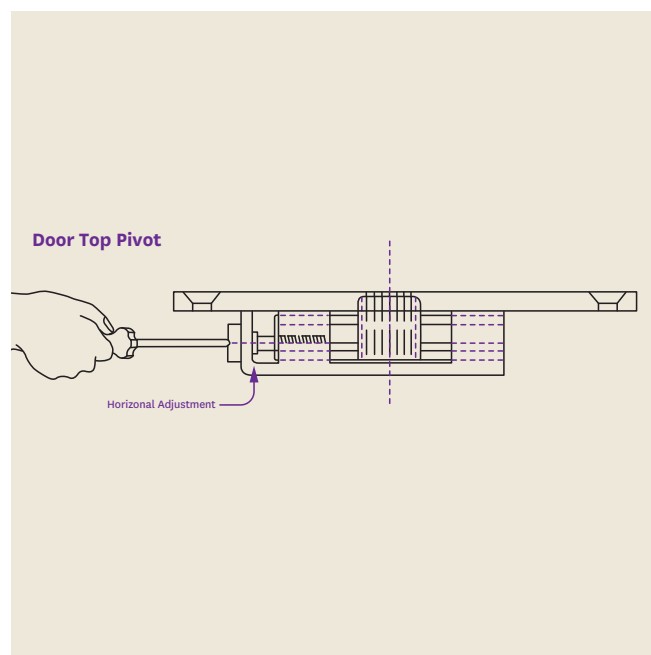

Corinthian customer service

VIC	Dandenong 6 Healey Rd Dandenong 3175 (03) 9794 1122	NSW	St Marys 17-35 Lee Holm Rd St Marys 2760 (02) 9673 7100	QLD	Acacia Ridge 16 Colebard St East Acacia Ridge 4110 (07) 3715 0100	SA	Regency Park 38 Birrale Rd Regency Park 5010 (08) 8243 0888	WA	Canning Vale 32 Coulson Way Canning Vale 6155 (08) 9455 1333
------------	--	------------	--	------------	--	-----------	--	-----------	---